




HARDWARE ENCLOSED








SHORT LEG

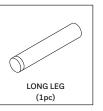

TOOL REQUIRED



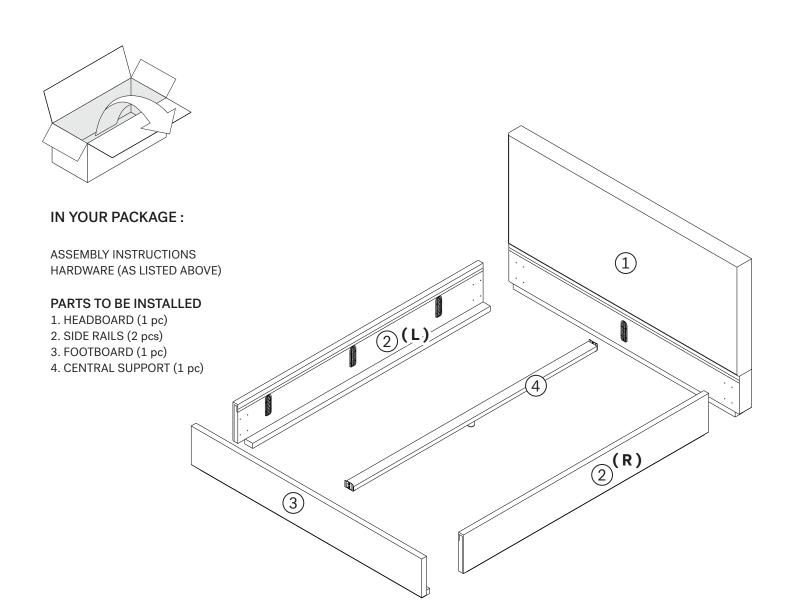

SYMBOLS







NUMBER OF PERSONS NEEDED




USE HAND



USE PHILLIPS SCREWDRIVER TO TIGHTEN


NOTICE

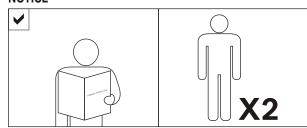







A INSTALLING METAL BRACKETS TO BOTH SIDE RAILS

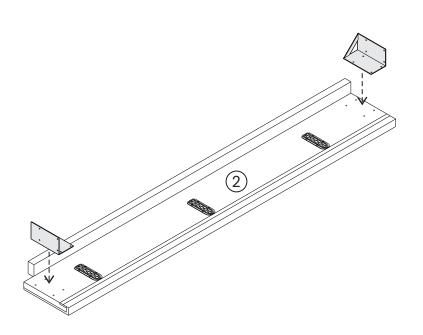


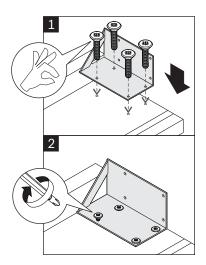

- USE METAL BRACKETS (4X)
- USE SCREWS M6x25 (16X)
- DO NOT TIGHTEN FULLY

B ATTACHING SIDE RAILS TO FOOTBOARD

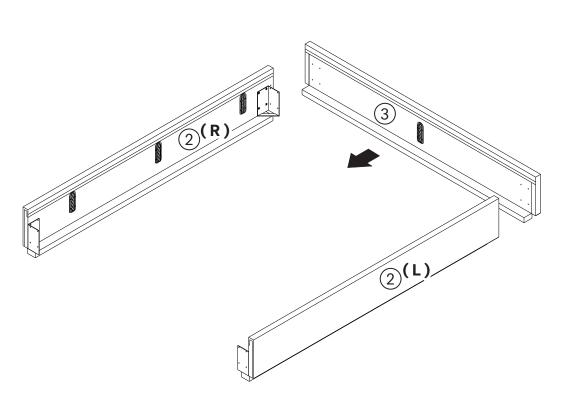

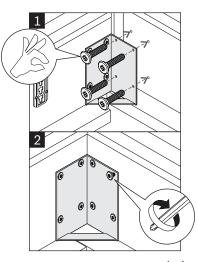



- USE SCREWS M6x25 (8X)
- DO NOT TIGHTEN FULLY






C ATTACHING SIDE RAILS TO HEADBOARD

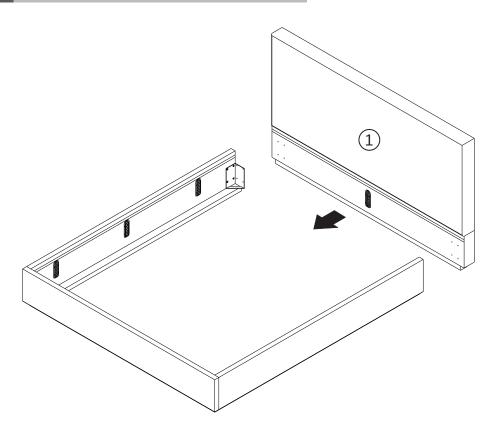

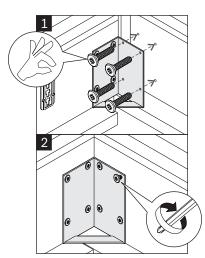


- USE SCREWS M6x25 (8X)
- DO NOT TIGHTEN FULLY


D ATTACHING LEG TO CENTRAL SUPPORT

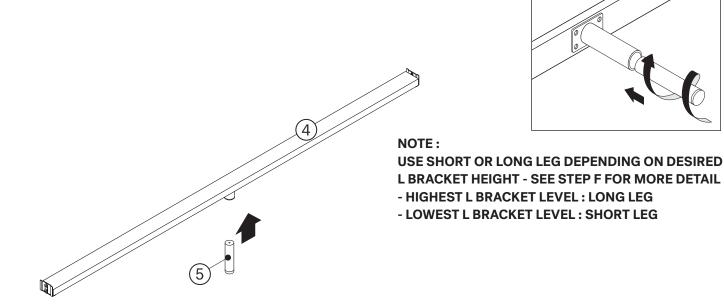




E ATTACHING CENTRAL SUPPORT

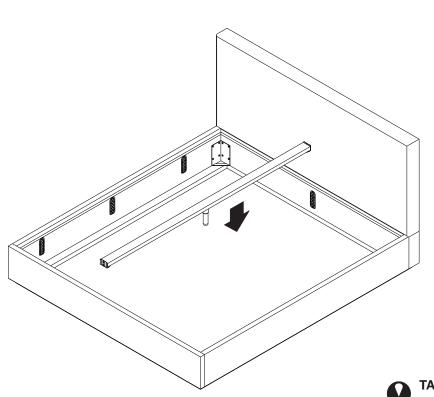


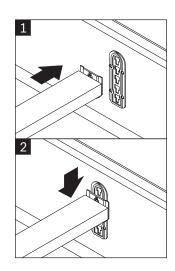


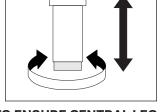


TAKE EXTRA CARE TO ENSURE CENTRAL LEG IS IN CONTACT WITH THE FLOOR

F ATTACHING L BRACKETS

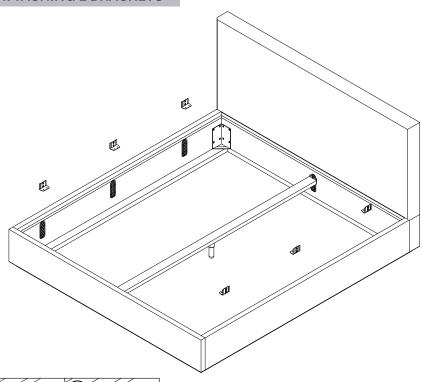

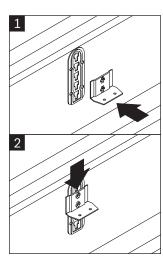


ENSURE ALL L BRACKET LEVELS ALIGN WITH CHOSEN CENTRAL LEG HEIGHT

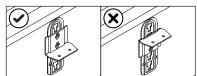





G ADJUST ALL SCREWS TO TIGHTEN

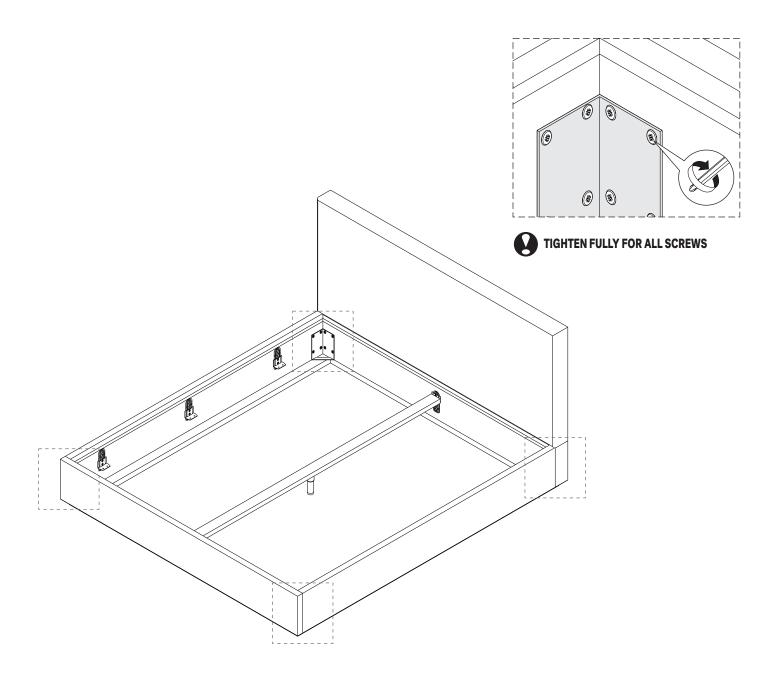

FRAME IS NOW READY TO FIT REMOVABLE FABRIC COVER AND PLACE MATTRESS

